

Rim Lock Error Codes

The system continuously monitors the operating state and will display an E number for specific faults. The full list is:

Code	Remedy
E0	Press RESET button.
E1	Check inside the unit to see if the worn gear from the motor is being obstructed.
E2	Check that the motor switch contact is making good contact.
E3	Ensure that the memory chip is correctly in socket and legs are not distorted.
E6	Return to CW Technologies (UK) Ltd.
E7	Check for correct insertion of reader cable.
E8	Return to CW Technologies (UK) Ltd.
EA	Return to CW Technologies (UK) Ltd.

NB To protect against static damage ensure that you touch the lock handle before pressing the REINSTALL or RESET button.

